



FireStorm Wiring Condenser Upgrade Instructions

STEP 1 - Check the wiring charts below, and see which wiring scheme your FireStorm has.

TYPE A Wiring

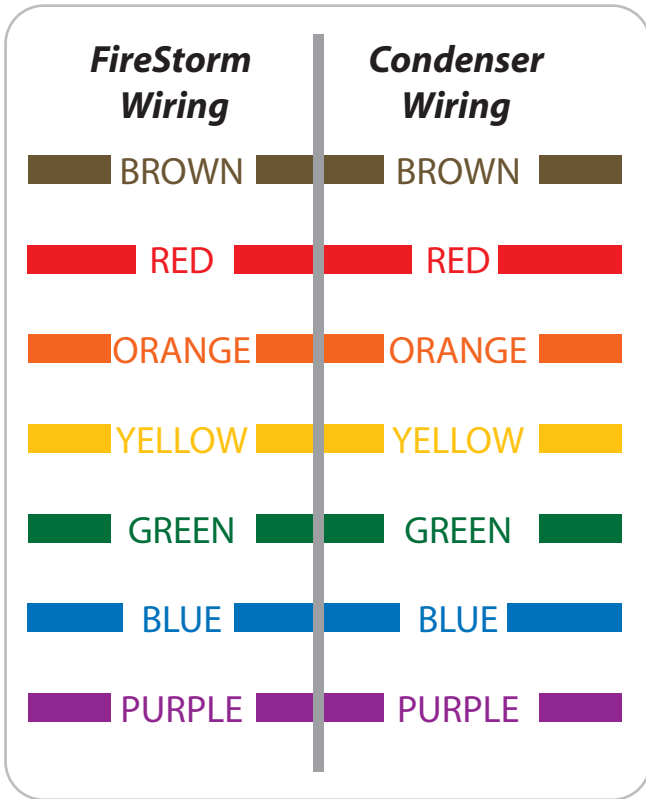

TYPE B Wiring

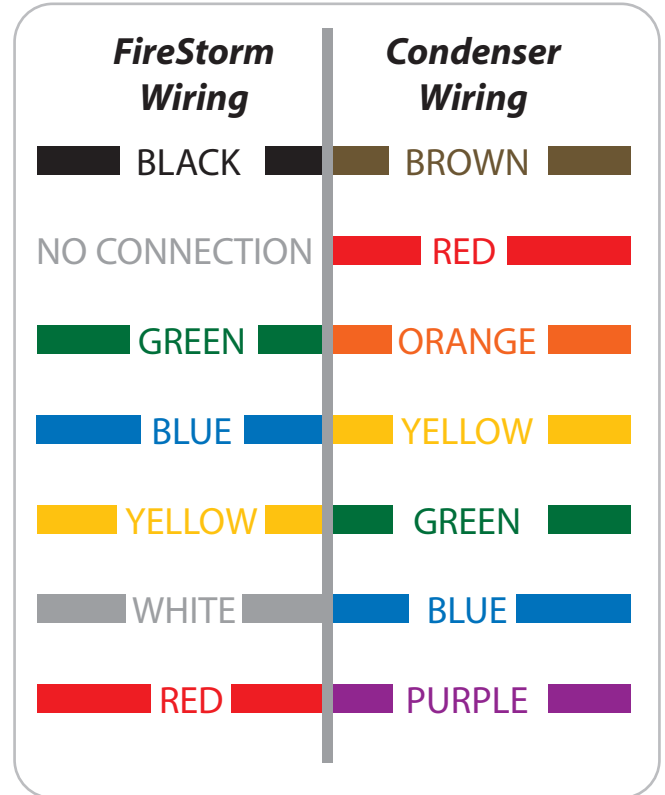

STEP 2 (Optional) - Decide if you will plug your FireStorm to a 4-Pin Trailer connector or if you will hard-wire it to your vehicle.

If you wish to cut the plug off of your wiring condenser and hard-wire it to your vehicle's tail lights, first determine what kind of tail light system you have by how they light up or looking at the wires.

Type 1 - Your tail lights use the same wire for turn signals and brake lights, much like a trailer. You can use the 4-Pin plug wiring diagram to hard-wire your wiring condenser to your vehicle.

Type 2 - Your car has separate wires for turn signals, brake lights, and running lights. You can hard-wire your FireStorm directly to your tail lights, but you cannot hardwire the 4-Pin connector to your tail lights.

