

Sky Pods LED CAB LIGHTS

INSTALLATION INSTRUCTIONS



STEP 1:

It's a good idea to clean the area you'll be working with thoroughly with warm soap and water. Determine the spacing that you wish to use by cutting out the included templates and placing them on the roof of your truck. When you have the desired spacing, tape them down.

STEP 2:

Pull back your headliner so that when you drill the holes for the wiring and mounting screws, you do not damage it. Use a 1/16 " drill bit for the mounting screws and a 1/4 " drill bit for the center wiring hole.

STEP 3:


Once you have fed the wires through the hole CAREFULLY, connect the black wire to any ground. Connect the red wire to a 12V+ source; either a switch or directly to your running (parking) lights. Connect the white wire to your reverse indicator light 12V + wire.

STEP 4:

Before you install the included screws to finalize the installation, you may wish to use some silicone around the drilled holes or on the tips of the screws to ensure a strong seal.

STEP 5:

REGISTER YOUR WARRANTY ONLINE OR BY SENDING THE ENCLOSED FORM!
Your Warranty is not valid if you do not send in your Warranty Registration Form within 30 days! If you would like to request a PlasmaGlow Catalog with our new truck-specific lighting products, visit our website at www.plasmaglow.com

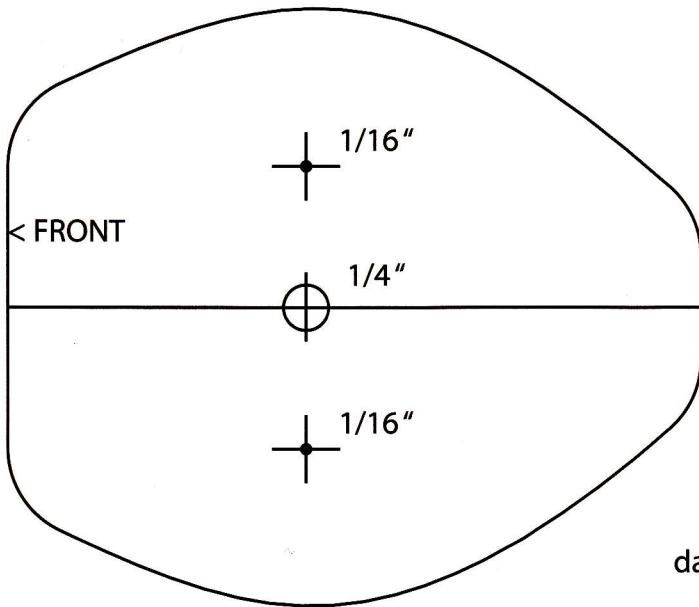

Sky Pods LED Cab Lights DRILLING TEMPLATES

Cut these templates out carefully and use them to visualize spacing before drilling, and to align holes while drilling. Use the center line to measure distance. Spacing will vary between makes and models. Make sure that before drilling, you cover the area to be drilled with masking tape to prevent damage to paint. PlasmaGlow assumes no responsibility for damage to vehicle due to installation of this product.

